



20 Pocono Road • P.O. Box 165 • Brookfield • CT • 06804 • (203) 775-1805 • fax (203) 775-0797

## **CARE & CLEANING OF NESSEN PRODUCTS**

The following instructions should insure your Nessen fixture maintains its appearance through years of service. Please note that improper cleaning and care may result in damage to the finish or product that will require factory renovation or replacement and will void any Nessen warranty.

### **METAL FINISHES:**

**Polished brass, satin brass, polished chrome, satin chrome, polished nickel & satin nickel**

Wipe with clean dry soft cloth. If necessary wash surface with a neutral liquid soap applied with soft damp cloth. Do NOT use any abrasive cleaner, disinfectant, brush or scouring pad as that will alter the finish. To extend the appearance of the finish, particularly in areas of high humidity, a high quality non-abrasive paste wax can be lightly applied.

### **ANTIQUÉ BRASS**

Wipe with clean dry soft cloth. If necessary wash surface with a neutral liquid soap applied with soft damp cloth. Do NOT use any abrasive cleaner, disinfectant, brush or scouring pad as that will alter the finish.

### **PAINTED FINISHES**

Wash surface with a neutral liquid soap applied with soft damp cloth. Do NOT use any abrasive cleaner, disinfectant, brush or scouring pad as that will alter the finish.

### **WOOD FINISHES:**

Wipe clean with a soft damp cloth moistened with clean water then dry with soft cloth. Dust often with feather duster or soft cloth. Do not use oily polishes or wax.

### **GLASS:**

Clean with a glass cleaner e.g. "Windex" applied with clean soft cloth taking care not to spray cleaner on metal finishes.

### **ACRYLIC:**

Clean with soft damp cloth moistened with water or a commercial non-abrasive plastic cleaner. Do not use ammonia-based glass cleaners as these will tend to cloud the acrylic.

### **FABRIC SHADES:**

Dust regularly with clean feather duster. Keep out of prolonged exposure to direct sunlight.